

Product summary

DiSEqC multiswitch with external power supply, switchable active/passive terr. input

Brief description

17in/20out standalone multiswitch for distribution of terrestrial and satellite signals from 4 satellite positions (16 polarities) to 20 users.

The multiswitch is DC supplied from connected satellite receivers.


Power from external supply is through socket DC 2.1 interconnected to all inputs.

Avoid short circuit at TERR input!

Using a rotary trimmer, it is possible to switch terrestrial band from active to passive mode.

For use with Quattro LNB only!

Power supply is included in the package.

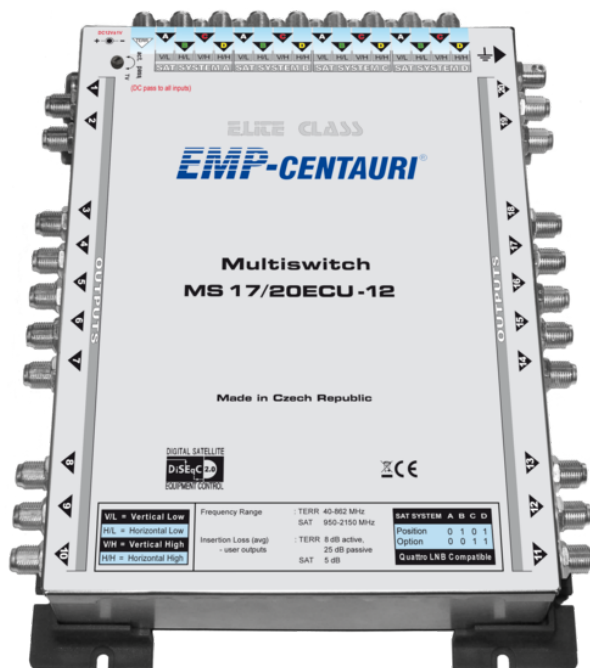

Technical data

| Parameter | Condition | Value |
|-----------------------|---------------------------|---------------------------|
| Frequency range | LNB inputs | 950-2150 MHz |
| | Terr. input | 40-862 MHz |
| | Outputs | 40-2150 MHz |
| Control | | DiSEqC 1.0 (2.0) commands |
| Insertion loss | Sat. | 5 dB avg |
| | Terr. active / passive | 8 / 25 dB avg. |
| Sat. inputs isolation | Between V/H polarisations | 20 dB min |
| | Between low/high bands | 25 dB min |
| | Between sat. systems | 25 dB min |
| Maximum input level* | Sat. | 105 dBμV avg |
| | Terr. | 105 dBμV avg |
| Maximum output level* | Sat. | 100 dBμV avg |
| | Terr. | 97 dBμV avg |
| Current_consumption | From each receiver | 100 mA (18 V) |
| Dimensions (w,d,h) | | 18.6 x 25 x 5.1 cm |
| Temperature range | | -25 ~ +60 °C |

Postal address: EMP-Centauri s.r.o. 5. května 690 339 01 Klatovy Czech Republic

Management: Tel.: +420 376 323 813 Tel.: +420 603 497 419 E-mail: info@emp-centauri.cz

Sales department: Tel.: +420 376 323 813 Tel.: +420 603 497 419 Tel.: +420 776 619 976 (EN) Tel.: +420 778 066 654 (CZ) E-mail: sales@emp-centauri.cz

Purchase department: E-mail: purchase@emp-centauri.cz

Technical support: Tel.: +420 376 323 853 (during workhours) Hotline: +420 603 497 419 (available anytime) E-mail: support@emp-centauri.cz Skype ID : **live::cid.624e3941fb5334d9**